

TELEPHONES No.156 L.B. & No.196 L.B. WITH BELL SET No.31.


D.E.L. CONNEXIONS FOR USE IN C.B.S. Nos. 2 & 3 AND MAGNETO AREAS,
ALSO ON LONG LINES IN C.B. & AUTO AREAS.
WIRING DIAGRAM.

N1297^A

28-9-34

PANEL 1.

SUPERSEDES N 255 SHEETS 1 & 2

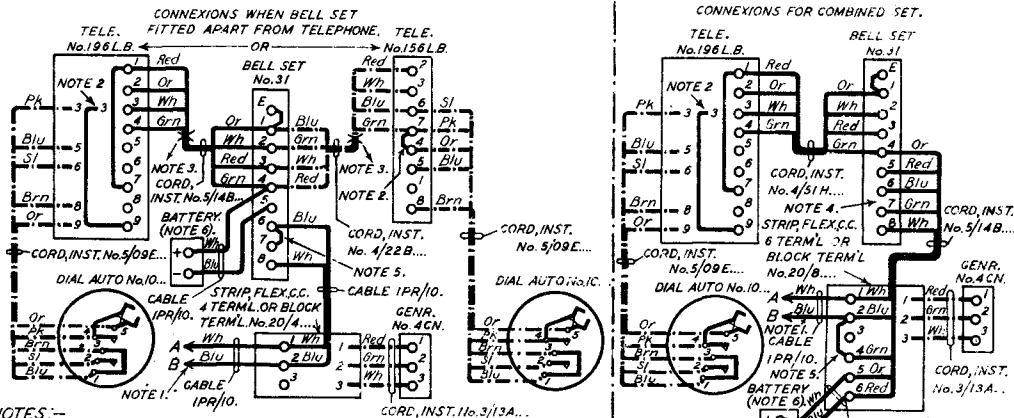

NOTES:-

1. FOR MAGNETO WORKING REMOVE THE "B" LINE CONNEXION FROM TERMINAL 2 TO TERMINAL 3 ON STRIP AND FIT GENERATOR AS SHOWN.
 2. FOR AUTO SYSTEMS:- (a) REMOVE STRAP BETWEEN TERMINALS 3 & 9 ON "TELE. No.196 L.B." OR BETWEEN TERMINALS 4 & 7 ON "TELE. No.156 L.B." (b) RECOVER DIAL AUTO DUMMY No.3. FIT APPROPRIATE DIAL AND CORD AND CONNECT AS SHOWN.
 3. FIT "STRIP, FLEX. C.C., 4 TERMINAL" OR "BLOCK TERMINAL No.20/4" AND "CABLE 4W/10" BETWEEN TELEPHONE AND BELL SET WHEN REQUIRED.
 4. TRANSFER STRAP FROM TERMINALS 6 & 7 ON BELL SET No.31 TO TERMINALS 2 & 4 ON STRIP FLEX.
 5. REMOVE STRAP AND CONNECT EXTENSION BELL WHEN REQUIRED.
 6. PROVIDE "BATTERY, LECLANCHE WK 4, WK 2 OR WK 1, 2 OR 3 CELLS" ACCORDING TO REQUIREMENTS (SEE E.I. TELEPHONE STATIONS A 3205).
 7. VARIOUS TERMINAL MARKINGS EXIST ON TELEPHONE No.156 L.B. THESE SHOULD BE IGNORED. THE INSET SHOWS THE RELATIVE POSITION OF THE TERMINALS AND THE NUMBERING SHOWN IN THE DIAGRAM.
- N.B. THE FOLLOWING DIAGRAMS SHOW THE INTERNAL CONNEXIONS OF:- (1) "TELEPHONE No.156 L.B." N1256.
(2) "TELEPHONE No.196 L.B." N296.
(3) "BELL SET No.31." N531.




EXPLANATORY.

TELE. No. 196 L.B. & BELL SET No. 31

OR

TELE. No. 156 L.B. & BELL SET No. 31.

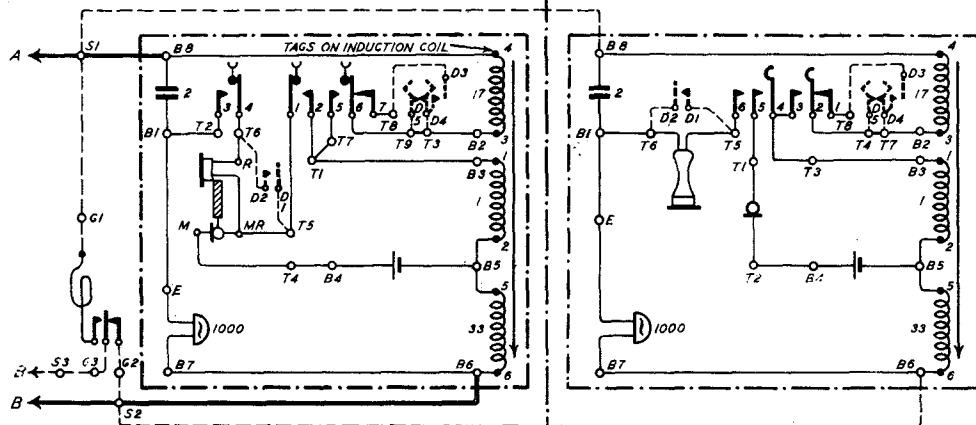

TERMINAL POINTS

B = BELL SET.
 G = GENERATOR.
 S = STRIP.
 T = TELEPHONE.
 D = DIAL.