



EXTENSION PLANS 7 & 7A CONSIST OF A MAIN TELEPHONE WITH A SWITCHING KEY AND ONE EXTENSION (INTERNAL OR EXTERNAL) WITH INTERCOMMUNICATION.

FACILITIES:-

INCOMING CALLS ARE RECEIVED NORMALLY AT THE MAIN TELEPHONE BUT MAY, IF DESIRED, BE RECEIVED AT THE EXTENSION.

EXCHANGE CALLS FROM THE MAIN TELEPHONE CANNOT BE HEARD AT THE EXTENSION.

EXTENSION TO EXCHANGE CALLS ARE NOT SECRET FROM THE MAIN ON PLAN 7 BUT THEY ARE SECRET ON PLAN 7A.

THE MAIN CAN HOLD AN EXCHANGE CALL AND SPEAK TO THE EXTENSION WITHOUT BEING HEARD ON THE EXCHANGE LINE.

AN INDICATOR AT THE MAIN SHOWS WHEN THE EXCHANGE LINE IS IN USE BY THE EXTENSION, EXCEPT IN MAGNETO AND CBS. 2 & 3 EXCHANGE AREAS. IN L.B. AREAS THE SWITCHING KEY AND INDICATOR IS WALL-MOUNTED, IN C.B. AND AUTO AREAS IT MAY BE WALL-MOUNTED IF REQUIRED.

ON INTERNAL EXTENSIONS PRESS-BUTTON SIGNALLING IS NORMALLY PROVIDED FROM THE MAIN TO THE EXTENSION AND VISE VERSA, BUT THERE ARE TWO EXCEPTIONS:-

- (i) WHEN THE WALL-MOUNTED SWITCHING SET IS FITTED THE MAIN CALLS THE EXTENSION BY HAND GENERATOR.
- (ii) IN MAGNETO EXCHANGE AREAS PRESS-BUTTON SIGNALLING IS NOT PROVIDED AS HAND GENERATORS ARE FITTED AT THE MAIN AND EXTENSIONS. ON EXTERNAL EXTENSIONS HAND GENERATOR SIGNALLING IS USED.

ISSUES				
	H	REVISED FORM. <i>M.A.</i>		14-6-65
	G	REDRAWN & REVISED. K.M.A.		23-10-56
	F	REDRAWN & REVISED. A.S. E.G. FE.IT		27-3-64
	E	INST NS. 35 & 38 REFER WAS INSTN. 23. G.E.A.R. E.S.R.		4-9-37
D	H.P.B.		20-11-20	

P.O.E.D.
 S. BCH.

PAPER: W
 CIRCULATION:
 GENERAL