

PLEASE BE BRIEF, AS OTHERS MAY BE WAITING TO USE THIS CALL OFFICE

TO CALL A SUBSCRIBER ON

Place four pennies in the slot, lift the receiver, wait for dialling tone (a continuous purring sound), and then dial the number you require.

Do not press button **A** yet.

The ringing tone (a tone of two beats repeated at regular intervals) means that the number is being rung.

WHEN YOU HEAR YOUR CORRESPONDENT

Press button **A** and speak.

Your correspondent cannot hear you until you have pressed button **A**.

Do not depress the receiver rest, or you may be disconnected.

IF THERE IS NO REPLY, OR IF THE LINE IS ENGAGED, OR IF THE NUMBER IS UNOBTAINABLE

Press button **B** and your money will be returned.

A tone of one beat repeated at regular intervals means that the line is engaged.

A continuous tone means that the number is unobtainable.

TO CALL A SUBSCRIBER ON AN EXCHANGE NOT SHOWN ABOVE, OR TO TELEPHONE A TELEGRAM

Do not insert coins, lift the receiver, wait for dialling tone, and then dial **O**.

WHEN THE OPERATOR ANSWERS

Ask for the exchange and number, or the service you require, and give the exchange and number of this telephone—

The operator will tell you when to insert coins.

Press button **A** when your correspondent answers or when the operator asks you.

TO RECALL THE OPERATOR

Move the receiver rest slowly down and up until the operator answers.

IN CASE OF DIFFICULTY, OR FOR INFORMATION

If you have attempted to make a call, replace the receiver on the rest for a few seconds.

If you have inserted coins, regain them by pressing button **B**.

Do not insert coins, lift the receiver, wait for dialling tone, and dial **O**.