

Panasonic

KX-T7000

Quick Guide

KX-TA 624 SERIES

Installed by :

Contents

How to use this guide	3
Basic Operation	3
Other Features :	
Absent Messages	4
Account Code Entry	4
Background Music	4
Busy Station Signaling (BSS)	4
Call Forward	4
Camp – on (Call Back on Busy)	4
Call Hold	5
Call Hold, Retrieval	5
Call Log, Incoming	5
Call Log Lock, Incoming	5
Call Park	5
Call Pickup (Directed, Group, Deny)	5
Call Retrieving: Tel. Answer Machine	5
Call Splitting	5
Call Waiting	5
Call Waiting (Central Office)	6
Conference	6
Data Line Security	6
Direct Inward System Access (DISA)	6
Do Not Disturb	6
Do Not Disturb (DND) Override	6
Door Opener	6
Doorphone Call	6
Electronic Station Lock	7
Executive Busy Override	7
External Feature Access	7
Flash (CO Line release)	7
Handsfree Answer Back	7
Log In / Log Out	7
Message Waiting	7
Microphone Mute	8
Operator Call	8

Outward Dialing Line Access	8
Paging	8
Personal Speed Dial	8
Pick up (Hot Line) (Standard Tel.)	8
Pulse to Tone Conversion	8
Redialing	9
Redial Saved Number	9
Room Monitor	9
Secret Dialing	9
Station Feature Clear	9
Switching to Tone Alert	9
System Speed Dial	9
Time Service (Mode Check)	9
Timed Reminder	10
Voice Mail Integration	10
Walking Class Of Service	10

Operator / Manager features

Date and Time	10
Electronic Station Lockout (Cancel)	10
DISA Outgoing Message	10
Remote Station Lock	10
Time (Day/Night/Lunch) Modes	11
Timed Reminder, Remote	11
Extension Password	11

Extension Programming

Call Waiting Tone Type	11
Flexible Button Programming	11
Intercom Alert Mode	12
CO Line Ringing Selection	12
Preferred Line Assignment Incoming	
No Line Preference	12
Ringing Line Preference	12
Prime Line Preference	12
Preferred Line Assignment Outgoing	
No Line Preference	12
Idle Line Preference	12
Prime Line Preference	12
Extension Number Confirmation	12
Station Programming Data, Default	12

How to use this guide

Operation	Description
[Off - Hook]	Press SP-Phone or Monitor or Lift the telephone handset
[REDIAL]	Press the REDIAL button, or the button programmed with the REDIAL function
[Talk]	Action required by the user is shown in brackets
[CO or DSS]	Button programmed to access the External Line (<i>Central Office CO</i>) or an Ext.
[PROG]	Move Program Switch on the rear of the Telephone to ' PROGRAM '
[3 3]	Dial the digits in the brackets (<i>i.e. Dial 3 twice on the keypad</i>)
[Tel. / Ext. No.]	Dial an External phone No. or Extension number (<i>An External phone No. will have to be prefixed with the access code 9 (Automatic Line Access) or 81 - 86 (for CO Line Groups 1 ~ 6)</i>)

Note :

- If a Feature requires the handset to be taken **Off – Hook**, it must be replaced after the Feature has been programmed or used.
- If programming requires the switch at the rear of the Telephone to be moved to the '**PROGRAM**' position, it must be returned to the '**SET**' position after the programming has been completed.

Basic Operation Description

Description	Key sequence
MAKING A CALL	
Intercom Calling (<i>Calling another extension</i>)	[Off - Hook] [Ext. No.] <i>or</i> [Off - Hook] [DSS (<i>DIRECT STATION SELECT</i>)]
Outgoing Call (<i>Making a call to the Central Office</i>)	[Off - Hook] [CO] <i>or</i> [Off - Hook] [9 (<i>for any available CO line</i>)] <i>or</i> [Off - Hook] [81 ~ 86 (<i>for Trunk Groups 1 ~ 6</i>)]
RECEIVING A CALL	
CO or INTERCOM LED flashes rapidly on Ext. (<i>With or Without Ringing</i>)	[Off - Hook] [CO <i>or</i> INTERCOM] (<i>press the flashing LED if the call does not automatically connect to your Ext. .</i>)
TRANSFERRING A CALL	
Transferring a call to another Extension (<i>Intercom or CO Line</i>)	[TRANSFER] [Ext. / Tel. No.] [Announce Call - to the Called party (optional)] [Replace your handset (to transfer the call)] (<i>if the called party does not wish to accept the call, you can return to the calling party by pressing [INTERCOM or CO]</i>)
USING A DSS BUTTON OR DSS CONSOLE	
To Transfer a call (<i>Note: Your Installer will have to set the transfer mode</i>)	Manual transfer : [TRANSFER] [DSS] <i>or</i> Automatic transfer : [DSS]

Feature Description

Description	Key sequence
ABSENT MESSAGE	
The Caller to your Ext. can receive a pre-programmed absent message (<i>Caller must have a System phone with LCD. i.e. KX-T7130/7030</i>)	
‘Will Return Soon’	[Off - Hook] [7 5 1 #]
‘Gone Home’	[Off - Hook] [7 5 2 #]
‘At Ext x x x’	[Off - Hook] [7 5 3] [Ext. No.] [#]
‘Back At HH : MM: AM / PM’	[Off - Hook] [7 5 4] [01 ~ 12 (<i>Hour</i>)] [00 ~ 59 (<i>Min.</i>)] [0 / 1 (<i>AM / PM</i>)] [#]
‘Out until MM / DD’	[Off - Hook] [7 5 5] [01-12 (<i>Month</i>)] [01 ~ 31 (<i>Day</i>)] [#]
‘In a meeting’	[Off - Hook] [7 5 6 #]
‘Canceling the pre-programmed message’	[Off - Hook] [7 5 0 #]
ACCOUNT CODE ENTRY	
A 4 digit Account code can be entered to identify the call, for client billing purposes (<i>The Call details plus Account Code can be printed out by connecting the SMDR output to a printer</i>)	Before Dialing : [Off - Hook] [CO or 9 (<i>Line Access</i>)] [FWD/ DND or PAUSE] [Account Code] [Tel. No.] During a Conversation : [FWD/ DND or PAUSE] [Account Code]
□ The [FWD/DND] button can be replaced by dialing [4 9] on the keypad and [PAUSE] by [* *]	
BACKGROUND MUSIC (BGM)	
Allows you to listen to Background music from the External Music Source through a System phone’s speaker	[On - Hook] [1]
BUSY STATION SIGNALING (BSS)	
Sends Call Waiting Tone to a dialed Busy Extension (<i>to inform the Ext. you are waiting</i>)	[Off - Hook] [Ext. No.] [Hear Busy] [2] [Wait for answer]
CALL FORWARDING (FWD)	
Call Forward - All Calls	[FWD/ DND] [1] [Ext. No.] [#]
Call Forward - Busy / No Answer	[FWD/ DND] [2] [Ext. No.] [#]
Call Forward - to an Outside CO Line (<i>Forwarding to an External Tel. No.</i>)	[FWD/ DND] [3] [<i>Access Code</i> 9 or 81~ 86] [Tel. No.] [#]
Call Forward - Follow Me (<i>Setting FWD from the FWD destination Ext.</i>)	[FWD/ DND] [5] [Your Ext. No.] [#]
Call Forward - Follow Me, CANCEL (<i>Canceling from the destination Ext.</i>)	[FWD/ DND] [8] [Your Ext. No.] [#]
Call Forward – CANCEL	[FWD/ DND] [0] [#]
□ The [FWD/DND] button can be replaced by a dialing [7 1] on the keypad	
CAMP – ON (Call Back on Busy)	
Rings your extension back, when the dialed Busy Extension or CO Line becomes free (<i>making or receiving a call cancels this feature</i>)	On hearing Busy Tone : [6] [Hang-up] Canceling : [Off - Hook]

Feature Description (Continued)

Description	Key sequence
CALL ON HOLD - PLACEMENT	
Hold - standard (<i>Any Ext. can pick up the Held call</i>)	[HOLD]
Hold - exclusive (<i>Only the Ext. which placed the call on Hold can retrieve it</i>)	[HOLD] [HOLD]
CALL ON HOLD – RETRIEVAL	
Retrieve a CO call held by another Ext. (<i>not flashing on your Ext.</i>)	[Off - Hook] [5 3] [CO Line Number]
Retrieve an INTERCOM call held by another Ext. (<i>not flashing on your Ext.</i>)	[Off - Hook] [5] [Ext. No.]
CALL LOG, INCOMING (Requires optional equipment KX-TA62493)	
Logs the last 20 calls received	[Off - Hook] [7 3 7 1 #]
Logs the first 20 calls received then stops recording	[Off - Hook] [7 3 7 0 #]
CALL LOG LOCK, INCOMING	
Prevents a User reading your Incoming call log (<i>4 digit Lock Code 0000 to 9999</i>)	[Off - Hook] [7 7] [Lock Code] [Lock Code] [#]
Cancels the 4 digit Lock Code	[Off - Hook] [7 7] [Lock Code] [#]
CALL PARK	
Placing a call in a Parking Zone	[HOLD] [2 2] [0 ~ 9 (<i>Parking Zone</i>)]
Retrieving a Call from a Parking Zone	[HOLD] [2 2] [0 ~ 9 (<i>Parking Zone</i>)]
CALL PICKUP	
Call Pickup, Directed (<i>Pickup a Call from a specific extension</i>)	[Off - Hook] [4] [Ext. No.] [Talk]
Call Pickup, Group (<i>Pickup a Call from your Pick-up Group</i>)	[Off - Hook] [4 0] [Talk]
Call Pickup - Deny (<i>Prevents your calls being intercepted</i>)	Set : [Off - Hook] [7 2 1 #] Cancel : [Off - Hook] [7 2 0 #]
CALL RETRIEVAL FROM Telephone Answering Machine (TAM)	
Allows interception of a Call already answered by the Telephone Answer Machine (TAM)	[Off - Hook] [TAM Ext. No.] [Hear Busy] [4] [Talk]
CALL SPLITTING	
Allows you to talk privately with two calls and alternate between the two parties.	[HOLD] [CO <i>or</i> INTERCOM]
CALL WAITING	
Activates Call Waiting for CO Calls	Set : [Off - Hook] [7 3 1 1 #] Cancel : [Off - Hook] [7 3 1 0 #]
Activates Call Waiting for Extension Calls	Set : [Off - Hook] [7 3 2 1 #] Cancel : [Off - Hook] [7 3 2 0 #]

Feature Description (Continued)

Description	Key sequence
CALL WAITING FROM THE CENTRAL OFFICE	
To connect with the CO caller after hearing CO call waiting tone (<i>Network service</i>)	[FLASH] [Talk]
CONFERENCE	
During a Call	[CONF] [Ext. or Tel. No.] [Talk] [CONF] (<i>Conference Established</i>)
During a Call (<i>Standard Telephone</i>)	[Flash Hook Switch] [Ext. or Tel. No.] [Talk] [Flash Hook Switch] [3] (<i>Conference Established</i>)
To Terminate One Party of the conference	[CO LINE or INTERCOM] (<i>of the party to remain connected</i>)
<input type="checkbox"/> Any Telephone may leave the Conference by hanging up.	
CONFERENCE UNATTENDED (must be enabled by system programming)	
To leave an established Conference with Two External parties.	[CONF] (<i>Duration of conference is controlled by phone system</i>)
To rejoin Conference.	[CO (<i>Flashing Green</i>)]
DATA LINE SECURITY (i.e. using a modem)	
Prevents Interruptions while on a call such as Call Waiting, Hold Recall, etc.	Set : [7 3 0 1 #] Cancel : [7 3 0 0 #]
DISA OPTION (requires optional equipment KX-TA62491)	
See Detailed Description	User Manual (<i>Page 3-50 Telephone Features</i>)
DO NOT DISTURB	
Prevents Incoming Calls to your Ext.	Set : [FWD/DND] [4 #] Cancel : [FWD/DND] [0 #]
<input type="checkbox"/> The [FWD/DND] button can be replaced by a dialing [7 1] on the keypad	
DO NOT DISTURB OVERRIDE	
Overrides DND (Do Not Disturb) settings.	[Off – Hook] [Ext. No.] [2] [Talk]
‘DOOPHONE CALL’ (requires optional equipment KX-TA62460)	
Answering and Unlocking a received ‘Doorphone’ Call	[Off – Hook] [5 (<i>to unlock</i>)]
DOOR OPENER	
Unlocking the door	[Off – Hook] [5 5] [Door Opener No. (<i>1 to 4</i>)]
DOORPHONE CALL	
To Call a Doorphone	[Off - Hook] [3 1] [Doorphone No.] [Talk]

Feature Descriptions (Continued)

Description	Key sequence
ELECTRONIC STATION LOCK	
Prevents Outgoing Calls at your Ext. (4 Digit Lock Code 0000 ~ 9999)	Lock : [Off - Hook] [77] [Lock Code] [Lock Code] [#] Unlock : [Off - Hook] [77] [Lock Code] [#]
EXECUTIVE BUSY OVERRIDE – Extension (Feature has to be enabled by programming)	
Allows you to connect to (Barge) an existing Ext. to Ext. call	[Off - Hook] [Ext. No.] [3] [Talk]
EXECUTIVE BUSY OVERRIDE – CO Line (Feature has to be enabled by programming)	
Allows you to connect to (Barge) an existing Ext. to CO call	[Off - Hook] [CO] [Talk]
To disconnect one of the parties on the Barged call	[INTERCOM or CO] (of the Party to remain connected)
EXECUTIVE BUSY OVERRIDE DENY	
Prevents Executive Override	Set : [Off - Hook] [7330#] Cancel : [Off - Hook] [7331#]
EXTERNAL FEATURE ACCESS	
Allows Access to CO Line or Host PBX Features	[FLASH] [Enter Feature Code]
FLASH	
Disconnects the current call and reconnects to make a new call without hanging up	[FLASH] (System Programming may require changing)
HANDSFREE ANSWER BACK	
Intercom calls are automatically answered in Handsfree mode	Set : [AUTO ANSWER] (LED Flashes) Cancel : [AUTO ANSWER] (LED Goes out)
LOG –IN / LOG – OUT	
Allows you to Log-out of a Hunting or Ring Group	[Off - Hook] [Log-In / Log - Out] or [Off - Hook] [7360# (Log - In)] [Off - Hook] [7361# (Log - Out)]
MESSAGE WAITING LAMP	
'Light' the MESSAGE Button on another Ext. indicating you wish to be called	[Off - Hook] [701] [Ext. No.] [#]
'Light' the MESSAGE Button on a Dialed Ext. when it is Busy or No Reply	[Off - Hook] [Ext. No.] [MESSAGE]
Replying to a 'Message' left at your Ext.	[Off - Hook] [MESSAGE]
Reviewing Your 'Messages'	[MESSAGE] (Repeated Pressing Scrolls Messages)
Cancels the 'Message' Light at another Ext.	[Off - Hook] [702] [Ext. No.] [#] or [Off - Hook] [Ext. No.] [MESSAGE] [MESSAGE]
Cancels all 'Messages' left at your Extension	[Off - Hook] [700#]

Feature Descriptions (Continued)

Description	Key sequence
MICROPHONE MUTE	
This mutes the microphone only	[MUTE] (<i>LED flashes red slowly</i>)
OPERATOR CALL	
To Call the System Operator	[0]
OUTGOING CO LINE ACCESS	
Automatic (<i>seizes 1st available CO Line</i>)	[Off - Hook] [9]
Line Group (<i>seizes a CO from the Line Group</i>)	[Off - Hook] [8] [1 ~ 6 (<i>Group No.</i>)]
Direct Access (<i>seizes chosen CO Line</i>)	[CO]
PAGING	
Paging - All *	[Off - Hook] [3 3 *] [Talk]
Paging - External *	[Off - Hook] [3 4] [Talk]
Paging - All Groups *	[Off - Hook] [3 3 0] [Talk]
Paging - One Group *	[Off - Hook] [3 3] [1 ~ 8 (<i>Group No.</i>)] [Talk]
Paging with Transfer (<i>Holds an Incoming Call ready to Transfer after the Page is Answered</i>)	[I/C Call] [TRANSFER] [Page (<i>i.e. All - 33*</i>)] [Wait for answer] [Talk] [Replace your Handset to connect the Incoming Call to the Answered Page]
Note * : After Paging you can wait [Off - Hook] for an Answer to your Page	
PAGING FEATURES	
Paging – Answer (<i>Answering a Page</i>)	[Off - Hook] [4 3] [Talk]
Paging – Deny (<i>Prevents Paging on the system phone speaker</i>)	Set : [7 3 4 1 #] Cancel : [7 3 4 0 #]
PERSONAL SPEED DIALING	
Storing (<i>Up to 10 No's. can be stored at each Ext.</i>)	[Off - Hook] [2 *] [Personal Speed Dial No.] [Tel. No.] [#]
Dialing	[Off – Hook] [#] [Personal Speed Dial No.]
Checking the Stored Numbers	[Off - Hook] [3 *] [Personal Speed Dial No.]
PICKUP DIALING (HOT LINE) (Standard telephone only)	
Storing a phone number	[Off - Hook] [7 4 2] [Tel. No.] [#]
Activating	Set : [7 4 1 #] Cancel : [7 4 0 #]
<input type="checkbox"/> Automatically Dials the stored number when the telephone is taken [Off - Hook]	
PULSE to TONE CONVERSION	
Allows you to Switch from Pulse to Tone Dialing (<i>when required i.e. Voice Mail, etc.</i>)	[* #] (<i>Tone Mode</i>)

Feature Descriptions (Continued)

Description	Key sequence
REDIALING	
Automatic Redial (<i>Repeats the redial attempt a Pre-programmed No. of Times</i>)	[SP-PHONE <i>or</i> MONITOR] [REDIAL <i>or</i> SAVE]
Last Number Redial	[REDIAL (<i>or dial</i> [##] <i>or</i> [80] <i>on the keypad</i>)]
REDIAL SAVED Number	
Storing a number for redial (<i>During a conversation</i>)	[AUTO DIAL] [SAVE]
Dialing the Saved Number	[Off - Hook] [SAVE]
ROOM MONITOR	
Setting (<i>At the Monitored Telephone</i>)	[Off - Hook] [7 3 5 1 #] [Replace Handset] [AUTO ANSWER]
Monitoring	[Off - Hook] [MUTE] [Ext. No.] [Listen]
Paging a monitored room	[Off - Hook] [MUTE] [Ext. No.] [Listen] [Off - Hook <i>or</i> MUTE] [Talk]
Temporarily canceling the Monitoring	[AUTO ANSWER / MUTE]
Canceling	[Off - Hook] [7 3 5 0 #]
Through a Doorphone	[Off - Hook] [MUTE] [3 1] [1 ~ 4 (<i>Doorphone No.</i>)] [Listen]
<ul style="list-style-type: none"> <input type="checkbox"/> Doorphone access tone can be eliminated through programming <input type="checkbox"/> Access tone is not sent to the Monitored System Phone <input type="checkbox"/> System Programming sets Monitoring Extensions <input type="checkbox"/> Not available on KX-T7050 / KX-T7055 telephones 	
SECRET DIALING	
When Storing the Telephone No.	Press the [INTERCOM] Before and after digits required to be hidden from the display
STATION FEATURE CLEAR	
Resets User Station Features	[Off - Hook] [7 9 #]
SWITCHING TO TONE ALERT	
An Extension Programmed for Voice Alert can be changed to Tone Alert	[Off - Hook] [Ext. No.] [Confirmation Tone] [*] [Ring Back Tone]
SYSTEM SPEED DIAL	
Dialing System Speed Dial Nos.	[Off - Hook] [AUTO DIAL <i>or</i> *] [Speed Dial No.]
TIME SERVICE (Day / Night / Lunch Mode Check)	
Confirming the current mode	[Off - Hook] [#] (<i>Displayed for 3 sec.</i>)

Feature Descriptions (Continued)

Description	Key sequence
TIMED REMINDER (from the Extension)	
Alarm / Reminder Call – Set (<i>The System will Ring the Ext. at the time set</i>)	[Off - Hook] [7 6] [01 ~ 12 (<i>Hour</i>)] [00 ~ 59 (<i>Min.</i>)] [0 / 1 (<i>AM / PM</i>)] [1 (<i>next occurrence</i>) or 2 (<i>daily recurrence</i>)] [#]
Alarm / Reminder Call - Cancel	[Off - Hook] [7 6 2 #]
Alarm / Reminder Call – Confirmation	[Off - Hook] [7 6 3 #]
VOICE MAIL INTEGRATION	
Forwarding Calls to Voice Mail (<i>Use setting B, If your Voice Mail System requires # 6 before your ext. I.D.</i>)	[Off - Hook] [FWD/DND] [91 (A) or 92 (B)] [#]
Retrieving your Messages	[Off - Hook] [MESSAGE or Voice Mail Ext. No.]
Canceling	[Off - Hook] [FWD/DND] [90] [#]
□ The [FWD/DND] button can be replaced by a dialing [7 1] on the keypad	
WALKING Class Of Service	
Allows you to use your COS at another Ext. (<i>4 Digit Password set by the System Manager</i>)	[Off - Hook] [7 *] [Password] [Your Ext. No.] [#] [Confirmation Tone] [Tel. No.]

Operator / Manager Features

Description	Key sequence
DATE and TIME SETTING	
Setting the System Clock (<i>Year setting : i.e. 98 = 1998 , 00 = 2000</i>)	[PROG] [0] [2 Digit (<i>Year</i>)] [01-12 (<i>Month</i>)] [01-31 (<i>Day</i>)] [0 (<i>Sun</i>) ~ 6 (<i>Sat</i>)] [01 ~ 12 (<i>Hour</i>)] [00 ~ 59 (<i>Min.</i>)] [0 / 1 (<i>AM / PM</i>)] [STORE (<i>AUTO DIAL / STORE</i>)]
ELECTRONIC STATION 'LOCKOUT' – CANCEL ALL	
Cancels 'Lockout' at all Ext.	[PROG] [8] [STORE]
DISA OUTGOING MESSAGE	
Recording the Message (<i>Operator function</i>)	[PROG] [9] [Off – Hook] [0 (<i>Both OGM 1 & 2</i>) or 1 (<i>OGM 1</i>) or 2 (<i>OGM 2</i>)] [Record Message] [STORE]
Play the Outgoing Message	[PROG] [9] [3 (<i>OGM 1</i>)] or [4 (<i>OGM 2</i>)] [STORE] [Message Plays]
REMOTE STATION LOCK CONTROL	
Locking an Extension (<i>Prevents outgoing calls</i>)	[Off - Hook] [STATION LOCK (<i>for required Ext.</i>)] (<i>LED Lights</i>)
Unlocking	[Off - Hook] [STATION LOCK] (<i>LED Goes out</i>)

Operator / Manager Features (Continued)

Description	Key sequence
TIME (Day / Night / Lunch) SERVICE SETTING	
Changing Mode - Manually	[Off - Hook] [7 8 1 #] (<i>Day Mode</i>) [7 8 2 #] (<i>Night Mode</i>) [7 8 3 #] (<i>Lunch Mode</i>)
Returning to Automatic Mode	[Off - Hook] [7 8 0 #]
Confirming Current Mode	[Off - Hook] [#]
TIMED REMINDER, REMOTE (Wake – Up Call)	
Setting	[Off - Hook] [7 6 4] [Ext. No.] [#] [Confirmation Tone] [7 6] [01 ~ 12 (<i>Hour</i>)] [00 ~ 59 (<i>Min.</i>)] [0 / 1 (<i>AM / PM</i>)] [1 (<i>next occurrence</i>) or 2 (<i>daily recurrence</i>)] [#]
Cancel	[Off - Hook] [7 6 4] [Ext. No.] [#] [Confirmation Tone] [7 6 2 #]
Remote Confirmation (<i>Display system phone only</i>)	[Off - Hook] [7 6 4] [Ext. No.] [#] [Confirmation Tone] [7 6 3 #]
EXTENSION PASSWORD SET (Manager only)	
The Manager can assign each Ext. a password	[PROG] [7] [System Password] [STORE] [SP-PHONE]
Repeat this step for required Extensions	[Password] [STORE] [SP-PHONE (<i>NEXT</i>) or REDIAL (<i>PREV</i>)]

Extension Programming

Description	Key sequence
CALL WAITING TONE TYPE	
Call Waiting Tone Type	[PROG] [5] [1 (<i>tone 1</i>) or 2 (<i>tone 2</i>)] [STORE]
FLEXIBLE (CO) BUTTON ASSIGNMENT	
Caller ID Indication (<i>Displays call information</i>)	[PROG] [CO Button] [6] [STORE]
Caller ID Selection (<i>Selects display: i.e. Name, Tel. No. or CO No.</i>)	[PROG] [CO Button] [7] [STORE]
Conference	[PROG] [CO Button] [3] [STORE]
Direct Station Select (DSS)	[PROG] [CO Button] [1] [Ext. No.] [STORE]
FWD / DND	[PROG] [CO Button] [4] [STORE]
Group – CO (G-CO)	[PROG] [CO Button] [#] [Group No.] [STORE]
Log-In / Log-Out	[PROG] [CO Button] [8] [STORE]
One – Touch Dial	[PROG] [CO or PF Button] [2] [Tel. No. (<i>Transfer clears the present Entry</i>)] [STORE]

Extension Programming

Description	Key sequence
FLEXIBLE (CO) BUTTON ASSIGNMENT (Continued)	
Other - CO (<i>selects any free CO</i>)	[PROG] [CO Button] [*] [STORE]
Restoring the MESSAGE Button (<i>If the message button has been changed to another feature</i>)	[PROG] [MESSAGE] [3] [STORE]
SAVE (<i>Saves the No. for redial</i>)	[PROG] [CO Button] [5] [STORE]
Single – CO	[PROG] [CO Button] [0] [CO Line No.] [STORE]
INTERCOM ALERT MODE	
Intercom Alert Assignment	[PROG] [4] [1 (<i>Tone</i>) or 2 (<i>Voice</i>)] [STORE]
CO LINE RINGING ASSIGNMENT	
CO Ringing Selection (<i>Selects which CO's ring on Incoming calls</i>)	[PROG] [3] [Enter the CO line numbers] [STORE]
PREFERRED LINE ASSIGNMENT – INCOMING	
No Line Preference (<i>Off-Hook does not answer a ringing CO line</i>)	[PROG] [2] [1] [STORE]
Ring Line Preference (<i>Off-hook answers any ring CO line</i>)	[PROG] [2] [2] [STORE]
Prime Line Preference (<i>Off-Hook answers assigned Prime line</i>)	[PROG] [2] [3] [CO Line No.] [STORE]
PREFERRED LINE ASSIGNMENT – OUTGOING	
No Line Preference (<i>Off-Hook does not connect to a CO line</i>)	[PROG] [1] [1] [STORE]
Idle Line Preference (<i>Off-hook connects to any idle CO line</i>)	[PROG] [1] [2] [STORE]
Prime Line Preference (<i>Off-Hook connects to assigned Prime line</i>)	[PROG] [1] [3] [CO Line No.] [STORE]
EXTENSION NUMBER CONFIRMATION	
Displays your Jack and Ext. No.	[PROG] [6] [HOLD]
STATION PROGRAMMING DATA DEFAULT	
Restores all Extension Programming back to the Factory Default settings	[PROG] [# *] [STORE]

**Panasonic Consumer Electronics Company ("PCEC"),
Division of Matsushita Electric Corporation of America**
One Panasonic Way, Secaucus,
New Jersey 07094

**Panasonic Sales Company ("PSC")
Division of Matsushita Electric
Puerto Rico, Inc.**
Ave. 65 de Infanteria, Km. 9.5,
San Gabriel Industrial Park, Carolina,
Puerto Rico 00985