

 
# *Freestyle Additional Handset & Charger*

## *User guide*

**You will not be able to make or receive calls using additional handsets until they have been registered using your Freestyle base unit. This handset will only work with the Freestyle 90, 130, 1025 and 1200.**

## Freestyle Additional Handset & Charger

# At a glance

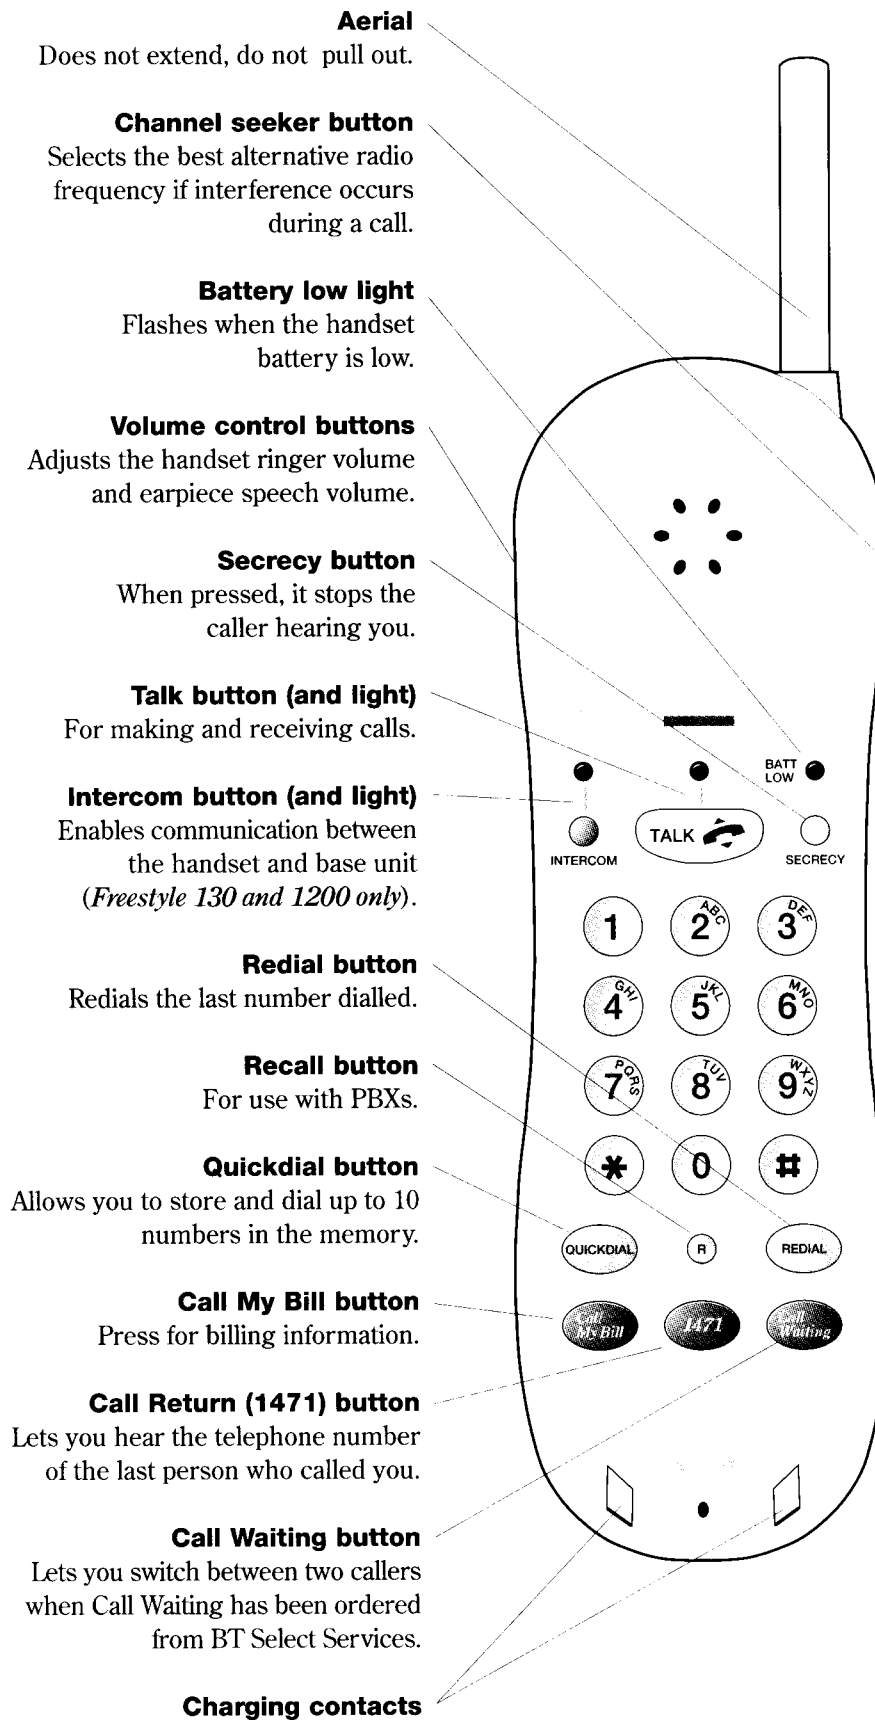


## Freestyle Additional Handset & Charger

# Setting up

Follow these steps to get your Freestyle additional handset ready for use. For full operating details please refer to your Freestyle base unit user guide.


*Like all cordless phones, your Freestyle additional handset will need charging for 24 hours before use.*

### *1 Handset aerial*

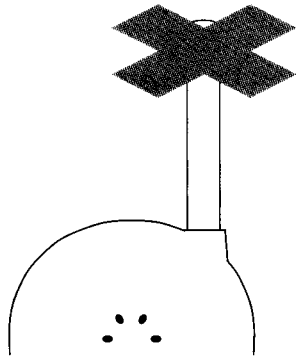

Your Freestyle additional handset uses a compact aerial which does not pull out.

### *2 Plug the power cable into the charging unit*

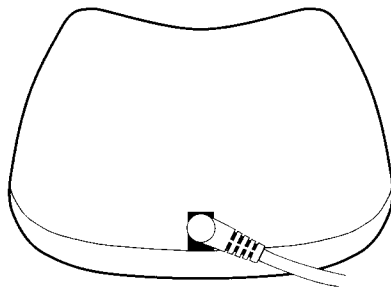

Plug the power cable into the socket located on the back of the charging unit.

### *3 Connect the 3-pin adaptor into a convenient mains socket*

### *4 Place the handset on the charging unit*

Make sure the red **CHARGING** light at the front of the charging unit comes on.

### *5 Leave the handset to charge for 24hrs*

## **Freestyle Additional Handset & Charger**

### ***6 Registering your handset***

You must register your Freestyle additional handset before it can be used with your Freestyle base unit. Make sure that each additional handset is registered with a different number (2,3 or 4) so it can be identified from other additional handsets. *See page 5.*

#### **Important**

*The Freestyle 90 & 1025 do not feature an INTERCOM button. When registering an additional handset to a Freestyle 90 or 1025 base unit please use the base unit PAGE button.*

#### **To register an additional handset**

- Press and hold the base unit **INTERCOM** button (**PAGE** button on the Freestyle 90 & 1025) for 5 seconds. The base unit will beep (not for Freestyle 1025) and the **IN USE** light will flash.
- When the **IN USE** light begins to flash, release the **INTERCOM** button (or **PAGE** button) and place the additional handset on the base unit.

*Your additional handset must be placed on the base unit within five seconds of the **IN USE** light flashing.*

- Your additional handset is registered automatically and you will hear a confirmation beep and the **IN USE** light will stop flashing.

#### **To re-register an additional handset**

*Before re-registering, the old registration code must first be erased.*

If necessary you can re-register your additional handset by simply following the above procedure.

#### **To erase a registration code**

- Press and release the **QUICKDIAL** button.
- Press and release the **CHANNEL SEEKER** button.
- Press the **\*** button four times.
- Press and release the **QUICKDIAL** button. You will hear a confirmation beep, the old registration code is now erased and you can re-register your additional handset following the procedure above.

## Freestyle Additional Handset & Charger

*Check that your additional handset is registered correctly by pressing the **TALK** button and listening for a dial tone.*

*If you do not hear a dial tone your additional handset is either out of range of the base unit or it has not been registered properly, or the base unit line cord is not plugged in.*

### *7 Setting the handset number*

Each additional handset must be assigned an identity number (1, 2, 3 or 4). Generally the base unit handset will be **HANDSET 1**, additional handsets can then be numbered as they are added.

*Your Freestyle additional handset is pre-set to handset number 2. To change this number follow the procedure below.*

#### **To set a handset identity number**

- Press and release the **QUICKDIAL** button.
- Press and release the **SECURITY** button.
- Enter the identification number (1-4) using the keypad.
- When you have entered the number press the **QUICKDIAL** button.
- You will hear a beep confirming that the new number has been stored.

*Make a note of the identification number by writing it on the handset's directory label.*

## *Using your additional handset*

The handset range is up to 250 metres from the base unit in ideal conditions. If you start to go out of range while using the phone, you will hear warning beeps. If you do not come back in range, your call will be disconnected.

#### **To make a call**

- Lift the handset off the charger.
- Press the **TALK** button. The **TALK** light comes on.
- Listen for the dialling tone.
- Dial the number you want.

## **Freestyle Additional Handset & Charger**

*If you do not hear a dialling tone after pressing the **TALK** button, wait a few seconds. On a few exchanges, there may be a delay.*

### **To end a call**

- Press the **TALK** button or replace the handset.

### *Page button - Freestyle 90 & 1025 only*

Freestyle 90 base units feature a **PAGE** button. When pressed, the base unit and all the handsets registered to that base unit will ring and the **INTERCOM** light on the handset will flash. The **PAGE** button feature does not enable conversation between the base unit and handset.

### **PLEASE NOTE**

*The **INTERCOM** button on the additional handset will not work with the Freestyle 90 or 1025.*

### *Intercom button - Freestyle 130 & 1200*

Freestyle 130 and 1200 feature an **INTERCOM** button which enables conversation between the base unit and the handset.

### **To use the intercom button**

- Press the **INTERCOM** button on the base unit or the handset, the base unit or handset (depending on which one you are trying to contact) will ring.
- Press the **INTERCOM** button on the unit being contacted and you can talk between the base unit and handset.
- Press either **INTERCOM** button to end the call.

*The **PAGE** and the **INTERCOM** buttons cannot be used during a call.*

When the intercom button is pressed on the base unit, all handsets registered to that base unit will ring. However, only the first handset which answers the intercom call can hold a conversation.

## Freestyle Additional Handset & Charger

### *Transferring calls between handsets*

Whilst on a call (ie. in talk mode):

- Press and release the **SECRECY** button.
- Enter the number of the handset you want to transfer the call to. The specified handset will ring.
- To answer the call press the **TALK** button.

*If the call is not answered within 30 seconds it is returned to the original handset. The original handset will ring to let you know if this has happened, if the call remains unanswered the handset will automatically end the call.*

*If you wish, you can press the **TALK** button to cancel the transfer of the call.*

### *Volume control buttons*

The volume control buttons are located on the left-hand side of the handset. They are used to adjust the ringer volume and the volume of the caller in the earpiece.

#### **To adjust the handset ringer volume**

When the handset is not in use you can adjust the ringer volume:

- Press the **+** button to increase the handset ringer volume.
- Press the **-** button to decrease the handset ringer volume.

When adjusting the ringer level it will be confirmed by a 2 second ringing tone.

To switch the ringer volume to OFF press and hold the **-** button until you hear a confirmation beep.

#### **To adjust the speech volume**

During a conversation you can adjust the volume of the incoming caller:

- Press the **+** button to increase the speech volume.
- Press the **-** button to decrease the speech volume.

### *Battery low indicator*

When fully charged and in good condition, the handset battery will provide up to 5 hours continuous talk time or 72 hours standby.

If the handset battery is running low, the **BATT LOW** light will flash every 10-15 seconds.

If you are making a call and the handset battery is running low, the phone will beep every 10-15 seconds.

Place the handset on the base unit to recharge.

## Freestyle Additional Handset & Charger

# Select Services

## *Call Return (1471)*

This free service lets you easily find who called your number last.

### To use the 1471 feature

- Press the **TALK** button and wait for a dialling tone.
- Press the **1471** button. You hear the number of your last caller announced and the time they called. If a call is made and the caller withholds their number, the time of the call is still stored but not the number.
- Press the **TALK** button again or replace the handset on the base to return to standby.

## *Call Waiting*

If an incoming call arrives while you are already busy on a telephone call, you will hear a soft beep every five seconds (This beep is not audible to the person you are speaking to). The second caller will hear an announcement to hold on as you are aware that there is a second call.

### To use Call Waiting

- You can answer the second call, without disconnecting your first caller, by pressing the **CALL WAITING** button. The first caller will be put on hold.
- When you have spoken to the second caller you can return to the first caller by pressing the **CALL WAITING** button again. You can switch back and forth between the two calls without disconnecting either if you wish.

The second caller will only be charged for their call from the moment you answer and not while they are waiting for your initial contact.

## *Call My Bill*

This feature gives you the cost of calls recorded on your telephone number since your last bill.

### To use Call My Bill

- Press the **TALK** button and wait for a dialling tone.
- Press the **CALL MY BILL** button. The call is answered by a recorded voice message.
- Follow the instructions given by the voice.
- When you have finished your call, press the **TALK** button or replace the handset.

## **Freestyle Additional Handset & Charger**

### **Need more help?**

*Call the BT Cordless Phone Helpline on **Lo-call 0845 7697146** where fully trained staff can help you from 9.00am to 5.30pm Monday to Friday (calls charged at local BT rate).*

### **Cleaning**

Simply clean the handset with a damp cloth (not wet) or an antistatic wipe. Never use household sprays and cleansers as they can damage your Freestyle Additional Handset.

### **Official approval**

Handset is tested and approved for connection to the public network, provided that it is used in accordance with the guidelines in this user guide.

### **You may connect it**

To direct exchange lines.

To extensions with new plug and socket arrangements provided with these direct exchange lines.

To compatible switchboards.

*This phone is designed for UK use only. Using it abroad may violate local radio laws.*

### **Approval for use**

This apparatus has been approved for use with the following facilities: Simple telephone. Cordless telephone. Time break recall/earth loop recall. Automatic storage of last number dialled. Loop disconnect and MF signalling. Microphone secrecy. PABX providing secondary proceed indication. Memory redial of up to ten numbers. Mixed mode dialling. Operation in absence if proceed indication. Network Services.

Any other usage will invalidate the approval of the apparatus if, as a result, it then ceases to conform to the standards against which approval was granted.

### **Mains power adaptor**

*The Freestyle 90/130/1025/1200 must only be used with the adaptor supplied. Using any other adaptor will result in non-compliance with EN60950:1992, and will invalidate the approval given to this apparatus.*

*It is not permitted to interfere with the main BT socket or wiring. If you have a problem, contact BT on **Freefone 0800 800 151** for residential or **Freefone 0800 800 154** for business lines.*



CE compliant to 89/336/EEC  
(EMC Directive) & 73/23/EEC  
(Low Voltage Directive)

**APPROVED** for connection to  
telecommunication systems specified  
in the instructions for use subject to  
the conditions set out in them



**504488**



*Offices in Europe, North America,  
Japan and Asia Pacific.*

The telecommunications services described in this publication are subject to availability and may be modified from time to time. Services and equipment are provided subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of any contract.

*TouchTone*<sup>™</sup> is a registered trade mark of British Telecommunications plc in the UK.

© British Telecommunications plc 1998.  
Registered Office: 81 Newgate Street, London EC1A 7AJ.  
Registered in England No. 1800000.  
Printed in China.  
Freestyle 90/130/1200 additional handset & charger Issue 3 (01/00).  
Designed by The Art & Design Partnership Limited.