

CONDITIONS FOR USE

The GEC Highlight Interline 3 system is approved for use on telecommunication systems run by British Telecommunications plc or Kingston-upon-Hull City Council, not shared service or 1 + 1 carrier systems.

Interline 3 is approved for connection to a business or private (domestic) exchange line. The exchange line must be a standard exclusive (not shared service) exchange line which is sometimes known as a 'DEL' (Direct Exchange Line). The line should be of the loop disconnect or multifrequency signalling type. Exchange lines invariably cater for loop disconnect signalling, but if you experience difficulty in dialling an exchange line number, a check should be made on this point with your local telephone sales office.

The label indicating that approval has been obtained is located on the base of the central control unit and on the base of each table unit, together with a descriptive label which indicates:-

- The system is manufactured in the U.K.
- The GEC manufacturing reference number.
- The name of the System (Interline 3).

This system is not suitable for use as an extension to a payphone.

HOW MANY SOCKETS

On an exchange line you can have as many sockets as you wish. You can plug your Interline 3 central unit into any one of the sockets. (The Interline 3 table units and telephone extensions plug into the double sockets provided and should not be connected to a socket which you may have previously had fitted).

Do not unplug your Interline 3 central control unit during an exchange line call or the call may be lost.

HOW MANY TELEPHONES

Connect too many telephones to one exchange line at the same time and you will overload the system, preventing your telephone from ringing.

To make sure you are within the limits, a Ringing Equivalence Number or REN is marked on the base of each telephone. Add up the REN values of each telephone you have plugged in. If the total REN value is 4 or less, you are within the limit of the exchange. GEC Highlight telephones have a REN value of 1. If your Interline 3 system has two GEC Highlight telephones connected to it, the total REN value of the system is 2. If it has three GEC Highlight telephones connected to it, the REN value is 3.

The REN value of the system should be added to the REN of any other telephones you may have plugged into the same exchange line.

CARE FOR YOUR INTERLINE 3 SYSTEM

DO NOT use spray polishes as these may damage internal components.

DO NOT use abrasive cleaners as these will damage the high gloss finish.

To ensure that your Interline 3 table units retain their smart appearance, the plastic parts should be wiped with a clean dampened cloth.

IN CASE OF DIFFICULTY

If your system does not appear to be working, the following simple instructions should enable you to discover the problem. You may wish to ask a friend to help by making and receiving calls from your line to theirs.


1. Check all handsets have been correctly replaced and the telephone extensions, table units and central unit are all firmly plugged into the sockets. Ensure your mains supply is still available. Now check and see if the system is working.
2. If not, disconnect your system from the mains supply and check to see if you can now make and receive exchange line calls from your telephone without pressing the E button. If you can, then your Interline 3 system has a fault. Check over your installation. If this is O.K., you should contact your supplier.
3. If it is not, unplug your central control unit. Plug a friend's telephone into your exchange line socket. If the instrument works, try it in any other sockets you may have had installed (not your Interline 3 sockets). The action should indicate if your previously installed sockets and exchange line are working correctly.
5. If you are ever in doubt, contact your dealer.

Note: If you find that your Interline 3 does have a fault, you can unplug your central control unit and replace it with one of your extension telephones. This will allow you to make and receive calls in the usual way so you will never be without service.

I N T E R L I N E 3

interline 3

TABLE UNIT VERSION

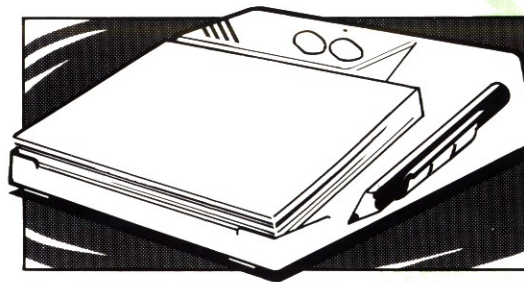

USER GUIDE

HIGH. S&C
LIGHT

U22 - BAUG

I N T E R L I N E 3

THIS APPARATUS HAS BEEN APPROVED FOR THE USE OF THE FOLLOWING FACILITIES:

INTERLINE 3 TABLE UNIT VERSION

- Simple telephone facility
- Loop disconnect signalling
- Multifrequency signalling
- Internal calls
- Outgoing exchange line calls
- Incoming exchange line calls
- Hold
- Direct connection to exchange lines on mains failure
- Enquiry during external calls
- Transfer
- Secretarial call filtering
- Ring back on Hold
- Lamp indication to show
 - when an extension is off hook
 - when an incoming exchange line arrives
 - when an exchange line call is on Hold

Any other usage will invalidate the approval of the apparatus if, as a result, it then ceases to conform to the standards against which approval was granted.

INSTRUCTIONS FOR USE IN A BUSINESS

Your GEC Highlight Interline 3 system can be used equally well in a business environment as in the home. The instructions for use still apply. The following information may be of interest when the system is connected to a switchboard or PBX (private branch exchange).

COMPATIBLE PBX'S

Your Interline 3 system can be used only with compatible PBX's, a list of which is available from your supplier. In cases of operating difficulty when connected to a compatible PBX, you should, in the first instance refer to your supplier.

It cannot be guaranteed that your system will operate correctly under all possible conditions of connections to compatible PBX's.

RECALL

If a recall button is required to operate the facilities offered by the host PBX, a telephone with the appropriate recall function, i.e. timed break or earth loop, should be plugged into the table unit. For the correct use of the Recall facility, please read your PBX and telephone User Guides.

INTERLINE 3 TABLE UNIT VERSION

● **TO CALL ANOTHER EXTENSION ON THE SYSTEM**

Lift handset - Press B.
Each time B is pressed the buzzer will sound at the other table units allowing coded buzzing to be used.
When a telephone handset is lifted, the lamp will light on each table unit.

● **MESSAGE PAD**

Record those important messages on the writing pad provided with your table unit.

● **TO TRANSFER AN EXCHANGE LINE CALL TO ANOTHER EXTENSION**

Press E to hold exchange line call - Press B to buzz required extension - Inform of call. Called ext. presses E to be connected to exchange line. An exchange line call can be transferred to any extension on the system. If called extension does not wish to accept the exchange line call - Press E to re-access the exchange line.

● **TO MAKE A PRIVATE ENQUIRY CALL TO ANOTHER EXTENSION**

Press E to hold exchange line - Press B to buzz extension.
Any enquiry call cannot be overhead by the exchange line caller.
To be re-connected to the exchange line - Press E.

● **TO MAKE AN EXCHANGE LINE CALL**

Lift handset - Press E - Hear tone - Dial required number. Any extension can make an exchange line call.

● **TO ANSWER AN EXCHANGE LINE CALL**

If your telephone is free - Lift handset. If you are busy talking to another extension - Press E.
When an exchange line call arrives, all telephones will ring. The lamp on each table unit will flash in time with the ringing.

● **PEN HOLDER**

Clip a pen or pencil into the holder on the side of your unit so it is always handy if required.

● **TO PUT AN EXCHANGE LINE CALL ON HOLD**

Press E - Replace handset. A buzz will be heard every 29 seconds to remind you of the held call, and the lamp will flash.
Note: If the call is held for more than 5 minutes, the line will be released and the call will be lost.
To re-access a held call - Lift handset - Press E.
A held call can be re-accessed from any extension.

